



**ALCATEL**  
mobile phones  
[www.alcatel-mobilephones.com](http://www.alcatel-mobilephones.com)

**OT-880A**

**ALCATEL**  
mobile phones





# Introduction.....

TCT Mobile Limited would like to thank you for purchasing this cellphone.

## Desktop

- Convenient at-a-glance view of Widget applications
- Menu shortcuts for quick access
- Neat organization of applications along any edge

## Power media applications

- Music player & Radio
- Video & Streaming
- Webcam

The 2.0 Megapixel camera is the best companion for PC instant messaging.

## Bluetooth

With Bluetooth 2.0 supporting A2DP profiles, enjoy handsfree conversations.

## My friends

Popular websites (like Bebo, Friendster, hi5, Myspace, etc.) to stay in touch with your friends wherever you are, whenever you want.

# Table of contents

<b>Safety and use.....</b>	<b>6</b>
<b>General information .....</b>	<b>11</b>
<b>1 Getting started.....</b>	<b>13</b>
1.1 Set-up .....	13
1.2 Power on your cellphone.....	15
1.3 Power off your cellphone.....	15
1.4 Using the touchscreen .....	15
<b>2 Your cellphone .....</b>	<b>16</b>
2.1 Status bar icons.....	19
2.2 Status list .....	21
2.3 Desktop .....	21
2.4 Widget list.....	22
2.5 Toolbar .....	22
<b>3 Dialer.....</b>	<b>23</b>
3.1 Making a call.....	23
3.2 Calling your voicemail .....	24
3.3 Receiving a call .....	24
3.4 During a call.....	25
3.5 Conference calls .....	26
3.6 Line switching.....	26
<b>4 Menu arrange .....</b>	<b>27</b>
<b>5 Messages .....</b>	<b>28</b>
5.1 Create message.....	28
5.2 Inbox.....	29
5.3 Outbox.....	30
5.4 Sent.....	30
5.5 Voicemail .....	30
5.6 Broadcast SMS.....	30
5.7 WAP alerts .....	30
5.8 Drafts.....	30
5.9 Archive.....	31



5.10	Empty folder .....	31
5.11	Templates .....	31
5.12	Settings .....	31
<b>6</b>	<b>Email.....</b>	<b>33</b>
6.1	Access .....	33
6.2	Email account set-up.....	33
6.3	Create Email .....	34
6.4	Inbox.....	34
6.5	Outbox.....	34
6.6	Sent.....	34
6.7	Drafts.....	34
6.8	Available options.....	35
<b>7</b>	<b>Instant messaging .....</b>	<b>36</b>
7.1	Access .....	36
7.2	Open a Palringo account online.....	36
7.3	Sign in/Sign out.....	36
7.4	Add service.....	37
7.5	Chat.....	37
7.6	Contacts .....	37
7.7	Groups .....	37
<b>8</b>	<b>Directory.....</b>	<b>38</b>
8.1	Consulting your directory.....	38
8.2	Adding a contact.....	39
8.3	Available options.....	40
<b>9</b>	<b>Call register .....</b>	<b>42</b>
9.1	Call memory .....	42
9.2	My numbers .....	42
9.3	Billing .....	43
9.4	Call settings.....	43
<b>10</b>	<b>Media applications .....</b>	<b>46</b>
10.1	Music player.....	46
10.2	Image Viewer.....	49
10.3	Video player.....	50
10.4	Radio.....	51

<b>11</b>	<b>Internet.....</b>	<b>52</b>
11.1	My friends.....	52
11.2	Opera.....	52
11.3	Web.....	52
11.4	News .....	54
11.5	Weather .....	55
<b>12</b>	<b>Entertainment.....</b>	<b>56</b>
12.1	Stopwatch.....	56
12.2	Ebook .....	56
12.3	Java .....	57
<b>13</b>	<b>Camera .....</b>	<b>59</b>
13.1	Access .....	59
13.2	Camera.....	59
13.3	Video .....	60
<b>14</b>	<b>Profiles .....</b>	<b>62</b>
14.1	General .....	62
14.2	Meeting .....	63
14.3	Outdoor .....	63
14.4	Indoor.....	63
14.5	Silence .....	63
14.6	Flight mode .....	63
<b>15</b>	<b>File manager.....</b>	<b>64</b>
15.1	My audios .....	64
15.2	My images.....	65
15.3	My videos .....	65
15.4	Ebook .....	65
15.5	My creations .....	65
15.6	Unknown files.....	65
15.7	Cellphone.....	65
15.8	Memory card.....	66
15.9	Managing audios, images, videos and creations.....	67
15.10	Formats and compatibility .....	68
15.11	Memory status .....	68



<b>16 Bluetooth™</b>	<b>69</b>
<b>17 Others</b>	<b>71</b>
17.1 Calendar	71
17.2 Calculator	71
17.3 Notes	72
17.4 Tasks	73
17.5 Clock	73
17.6 Converter	74
<b>18 Settings</b>	<b>75</b>
18.1 Cellphone settings	75
18.2 Call settings	78
18.3 Security	78
18.4 Networks	79
18.5 Connectivity	79
<b>19 Making the most of your cellphone</b>	<b>80</b>
19.1 PC suite	80
19.2 Webcam	80
<b>20 Latin input mode/character table</b>	<b>81</b>
<b>21 Warranty</b>	<b>85</b>
<b>22 Accessories</b>	<b>87</b>
<b>23 Troubleshooting</b>	<b>88</b>

## Safety and use.....

We recommend that you read this chapter carefully before using your cellphone. The manufacturer disclaims any liability for damage, which may result as a consequence of improper use or use contrary to the instructions contained herein.

### • TRAFFIC SAFETY:

Given that studies show that using a cellphone while driving a vehicle constitutes a real risk, even when the hands-free kit is used (car kit, headset...), drivers are requested to refrain from using their cellphone when the vehicle is not parked. Check the laws and regulations on the use of wireless telephones and their accessories in the areas where you drive. Always obey them. The use of these devices may be prohibited or restricted in certain areas.

When driving, do not use your cellphone and headphone to listen to music or to the radio. Using a headphone can be dangerous and forbidden in some areas.

When switched on, your cellphone emits electromagnetic waves that can interfere with the vehicle's electronic systems such as ABS anti-lock brakes or airbags. To ensure that there is no problem:

When switched on, your cellphone emits electromagnetic waves that can interfere with the vehicle's electronic systems such as ABS anti-lock brakes or airbags. To ensure that there is no problem:

- do not place your cellphone on top of the dashboard or within an airbag deployment area,
- check with your car dealer or the car manufacturer to make sure that the car's electronic devices are shielded from cellphone RF energy..

### • CONDITIONS OF USE:

You are advised to switch off the cellphone from time to time to optimize its performance.

Switch the cellphone off before boarding an aircraft to avoid prosecution.

Switch the cellphone off when you are in health care facilities, except in designated areas. As with many other types of equipment now in regular use, cellphones can interfere with other electrical or electronic devices, or equipment using radio frequency.

Switch the cellphone off when you are near gas or flammable liquids. Strictly obey all signs and instructions posted in a fuel depot, gas station, or chemical plant, or in any potentially explosive atmosphere.

When the cellphone is switched on, it should be kept at least 15 cm from any medical device such as a pacemaker, a hearing aid or insulin pump. In particular when using the cellphone you should hold it against the ear on the opposite side to the device, if any.

To avoid hearing impairment, answer the call before holding your cellphone to your ear. Also move the handset away from your ear while using the "hands-free" option because the amplified volume might cause hearing damage.

Do not let small children use your cellphone without supervision.

When replacing the cover please note that your cellphone may contain substances that could create an allergic reaction.

Always handle your cellphone with care and keep it in a clean and dust-free place.



Do not allow your cellphone to be exposed to adverse weather or environmental conditions (moisture, humidity, rain, infiltration of liquids, dust, sea air, etc.). The manufacturer's recommended operating temperature range is -10°C to +55°C (the max value depends on device, materials and housing paint/texture).

Over 55°C the legibility of the cellphone's display may be impaired, though this is temporary and not serious.

Do not open or attempt to repair your cellphone yourself.

Do not drop, throw or try to bend your cellphone.

Do not paint it.

Use only batteries, battery chargers, and accessories which are recommended by TCT Mobile Limited and its affiliates and are compatible with your cellphone model. TCT Mobile Limited and its affiliates disclaim any liability for damage caused by the use of other chargers or batteries.

Your cellphone should not be disposed of in a municipal waste. Please check local regulations for disposal of electronic products.

Remember to make back-up copies or keep a written record of all important information stored in your cellphone.

Some people may suffer epileptic seizures or blackouts when exposed to flashing lights, or when playing video games. These seizures or blackouts may occur even if a person never had a previous seizure or blackout. If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult your doctor before playing video games on your cellphone or enabling a flashing-lights feature on your cellphone. Parents should monitor their children's use of video games or other features that incorporate flashing lights on the cellphones. All persons should discontinue use and consult a doctor if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation. To limit the likelihood of such symptoms, please take the following safety precautions:

- Do not play or use a flashing-lights feature if you are tired or need sleep.
- Take a minimum of a 15-minute break hourly.
- Play in a well lit environment.
- Play at the farthest distance possible from the screen.

When you play games on your cellphone, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. Follow these instructions to avoid problems such as tendinitis, carpal tunnel syndrome, or other musculoskeletal disorders:

- Take a minimum of a 15-minute break every hour of game playing.
- If your hands, wrists, or arms become tired or sore while playing, stop and rest for several hours before playing again.
- If you continue to have sore hands, wrists, or arms during or after playing, stop the game and see a doctor.



Prolonged exposure to music at full volume using the music player may damage your hearing. Set your cellphone's volume to its lowest setting prior to inserting headphones in your ears and adjust the volume to your preference. Only use headphones that are recommended by TCT Mobile Limited and its affiliates.

## • PRIVACY:

Please note that you must respect the laws and regulations in force in your jurisdiction or other jurisdiction(s) where you will use your cellphone regarding taking photographs and recording sounds with your cellphone. Pursuant to such laws and regulations, it may be strictly forbidden to take photographs and/or to record the voices of other people or any of their personal attributes, and reproduce or distribute them, as this may be considered to be an invasion of privacy. It is the user's sole responsibility to ensure that prior authorization be obtained, if necessary, in order to record private or confidential conversations or take a photograph of another person; the manufacturer, the seller or vendor of your cellphone (including the operator) disclaim any liability which may result from the improper use of the cellphone.

## • BATTERY AND ACCESSORIES:

Before removing the battery from your cellphone, please make sure that the cellphone is switched off.

Observe the following precautions for battery use:

- Do not attempt to open the battery (due to the risk of toxic fumes and burns).
- Do not puncture, disassemble or cause a short-circuit in a battery.
- Do not burn or dispose of a used battery in the garbage or store it at temperatures above 60°C. Batteries must be disposed of in accordance with locally applicable environmental regulations. Only use the battery for the purpose for which it was designed. Never use damaged batteries or those not recommended by TCT Mobile Limited and/or its affiliates.



This symbol on your cellphone, the battery and the accessories means that these products must be taken to collection points at the end of their life:

- Municipal waste disposal centers with specific bins for these items of equipment
- Collection bins at points of sale.

They will then be recycled, preventing substances being disposed of in the environment, so that their components can be reused.

### In European Union countries:

These collection points are accessible free of charge. All products with this sign must be brought to these collection points.

### In non European Union jurisdictions:

Items of equipment with this symbol are not be thrown into ordinary bins if your jurisdiction or your region has suitable recycling and collection facilities; instead they are to be taken to collection points for them to be recycled.

In the United States you may learn more about CTIA's Recycling Program at [www.recyclewirelessphones.com](http://www.recyclewirelessphones.com)

**CAUTION: RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS**

## • CHARGERS

Home A.C./ Travel chargers will operate within the temperature range of: 0°C to 40°C.

The chargers designed for your cellphone meet with the standard for safety of information technology equipment and office equipment use. Due to different applicable electrical specifications, a charger you purchased in one jurisdiction may not work in another jurisdiction. They should be used for this purpose only.



Characteristics of power supply (depending on the country):

Travel charger: Input: 100-240 V, 50/60 Hz, 0.15 A

Output: 5 V, 350 mA

Battery: Lithium 850 mAh

## • RADIO WAVES:

THIS CELLPHONE MEETS THE GOVERNMENT'S REQUIREMENTS FOR EXPOSURE TO RADIO WAVES.

Your cellphone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio-frequency (RF) energy. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. These guidelines include a substantial safety margin designed to ensure the safety of all persons, regardless of age and health.

The exposure standard for cellphones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by public authorities such as the Federal Communications Commission of the US Government (FCC), or by Industry Canada, is 1.6 W/kg averaged over 1 gram of body tissue. Tests for SAR are conducted using standard operating positions with the cellphone transmitting at its highest certified power level in all tested frequency bands.

Although the SAR is determined at the highest certified power level, the actual SAR level of the cellphone while operating can be well below the maximum value. This is because the cellphone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output of the cellphone. Before a cellphone model is available for sale to the public, compliance with national regulations and standards must be shown.

The highest SAR value for this model cellphone when tested is 0.776 W/Kg for use at the ear and 1.34 W/Kg for use close to the body.

While there may be differences between the SAR levels of various cellphones and at various positions, they all meet the government requirement for RF exposure. For body-worn operation, the cellphone meets FCC RF exposure guidelines provided that it is used with a non-metallic accessory with the headset at least 1.5 cm from the body. Use of other accessories may not ensure compliance with FCC RF exposure guidelines.

The World Health Organization (WHO) considers that present scientific information does not indicate the need for any special precautions for use of cellphones. If individuals are concerned, they might choose to limit their own or their children's RF exposure by limiting the length of calls, or using "hands-free" devices to keep cellphones away from the head and body. (fact sheet n°193). Additional WHO information about electromagnetic fields and public health are available on the following website: <http://www.who.int/peh-emf>.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

For the receiver devices associated with the operation of a licensed radio service (e.g. FM broadcast), they bear the following statement:

This device complies with Part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference.

For other devices, they bear the following statement:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Your cellphone is equipped with a built-in antenna. For optimal operation, you should avoid touching it or degrading it.

As cellphone devices offer a range of functions, they can be used in positions other than against your ear. In such circumstances the device will be compliant with the guidelines when used with headset or usb data cable. If you are using another accessory ensure that whatever product is used is free of any metal and that it positions the cellphone at least 2cm away from the body.

## • LICENCES

Obigo® is a registered trademark of Obigo AB.



microSD Logo is a trademark.



The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by TCT Mobile Limited and its affiliates is under license. Other trademarks and trade names are those of their respective owners.

## OT-880A Bluetooth QD ID B016239



zicorporation

eZiText™ and Zi™ are trademarks of Zi Corporation and/or its Affiliates.



Java™ and all Java™ based trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries.

Opera Mini™ is a registered trademark of Opera Mini.

## Hearing Aid Compatibility

Your cellphone is rated: "For Hearing Aid", to assist hearing device users in finding phones that may be compatible with their hearing devices.

This device is HAC M3 compatible.

For more information please refer to "Hearing Aid Compatibility with Mobile Phones" leaflet or visit our website <http://www.alcatel-mobilephones.com/>



## General information .....

- **Website:** [www.alcatel-mobilephones.com](http://www.alcatel-mobilephones.com)
- **Hot Line Number:** In the United States, call 877-702-3444 for technical support.

On our Internet site, you will find our FAQ (Frequently Asked Questions) section. You can also contact us by e-mail to ask any questions you may have.

An electronic version of this user guide is available in English and other languages according to availability on our server: [www.alcatel-mobilephones.com](http://www.alcatel-mobilephones.com)

Your cellphone is a transceiver that operates on GSM networks with 850 and 1900 MHz bands.

### Protection against theft <sup>(1)</sup>

Your cellphone is identified by an IMEI (cellphone serial number) shown on the packaging label and in the product's memory. We recommend that you note the number the first time you use your cellphone by entering \*#06# and keep it in a safe place. It may be requested by the police or your operator if your cellphone is stolen.

## Disclaimer

There may be certain differences between the user manual description and the cellphone's operation, depending on the software release of your cellphone or specific operator services.

Connect with us on:

Facebook @ <http://www.facebook.com/alcatelonetouchtribe>

Or Twitter @ <http://www.twitter.com/Alcateltribeus>

 
<sup>(1)</sup> Contact your network operator for service availability



# Getting started .....


## 1.1 Set-up

### Removing or installing the back cover

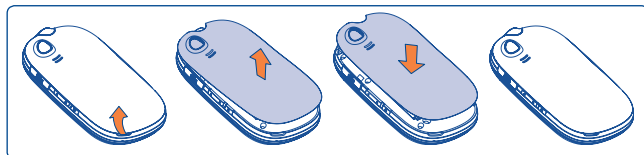

### Inserting or removing the SIM card <sup>(1)</sup>

 You must insert your SIM card to make phone calls. Please power off your cellphone before inserting or removing the SIM card.

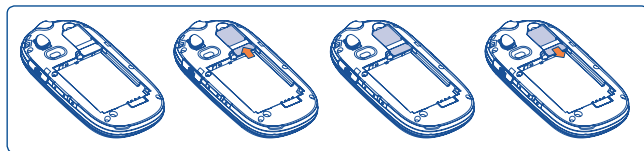

Place the SIM card with the chip facing downwards and slide it into its housing. Make sure that it is correctly inserted. To remove the card, press and slide it out.


<sup>(1)</sup> Check with your network operator to make sure that your SIM card is 3V or 1.8V compatible. The old 5 Volt cards can no longer be used. Please contact your operator.

### Installing or removing the battery



 - Insert and click the battery into place, then close the cellphone cover.
- Unclip the cover, then remove the battery.

### Charging the battery

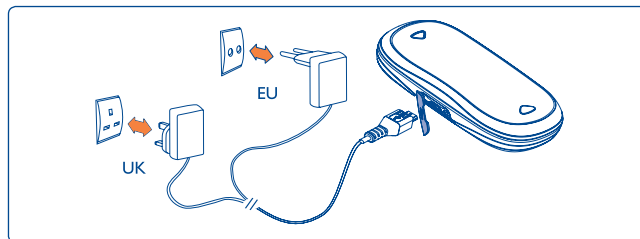

#### Connect the battery charger

- Charging may take about 20 minutes to start if the battery is flat.
- Be careful not to force the plug into the socket.
- Make sure the battery is correctly inserted before connecting the charger.
- The mains socket must be near to the cellphone and easily accessible (avoid electric extension cables).
- When using your cellphone for the first time, charge the battery fully (approximately 3 hours). You are advised to fully charge the battery (■).




The charge is complete when the animation stops.








## 1.2 Power on your cellphone

Hold down the  key until the cellphone powers on, type in your PIN code if necessary and then confirm. The main screen is displayed.

If you do not know your PIN code or if you have forgotten it, contact your network operator. Do not leave your PIN code with your cellphone. Store this information in a safe place when not in use.

If cell broadcast messages are displayed, tap to browse through them or press  to return to the main screen.

While the cellphone is searching for a network, “**Searching/Emergency**” will be displayed.

In the power on screen, you also have access to the functions of “**Radio**”, “**Camera**”, “**Music player**”, etc. even if there is no SIM card inserted.

## 1.3 Power off your cellphone

Hold down the  key from the main screen.

## 1.4 Using the touchscreen

### Tap

To access an application, tap it with your finger.

### Drag









Place your finger on the screen to drag the object to the destination.

 
 
### Scroll

Slide the screen to scroll up and down the applications, images, web pages...at your convenience.

# 2 Your cellphone.....



-  Delete a contact (in Directory/Call memory)
-  Delete a message (in Inbox/Outbox...)
-  Delete a file (in File manager)
-  Delete a note (in Notes)
-  Shift sound play among Headset, Bluetooth and Headset & Bluetooth (long key press).
-  Access your voicemail (long key press).
-  Input top-half character (press once), press twice to lock in this mode.
-  Confirm an option

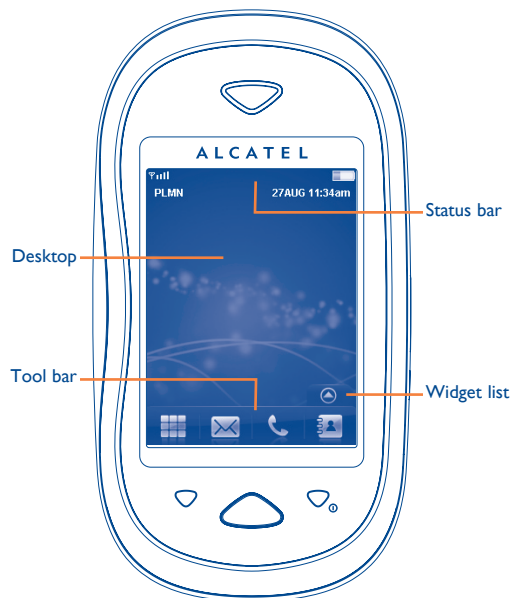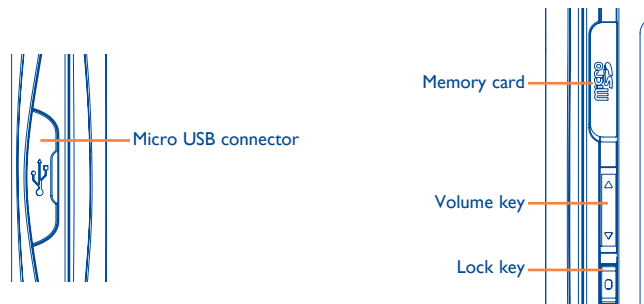

17



- Confirm an option
- Access Main menu (short key press)
- Open status list (long key press)



- Answer
- Send a call
- Access call memory (Redial) (short key press)



- Switch on/Switch off the cellphone (long key press)
- End call
- Return to the main screen



- Volume key: Volume up/down  
Zoom in/out  
Access "**LCD touch calibration**" (long key press).

















- Lock key: Lock/Unlock  
Take a photo (in Camera mode)  
Start/Pause a video recording

18



## 2.1 Status bar icons <sup>(1)</sup>

-  **Battery charge level**
-  **Vibrate alert:** your cellphone vibrates, but does not ring or beep with the exception of the alarm (see page 62).
-  **Bluetooth status** (Blue - Activated).
-  **Bluetooth status** (Connected to an audio device).
-  **Headset connected.**
-  **Keypad & LCD touch locked.**
-  **Call forwarding activated:** your calls are forwarded (see page 44).
-  **Alarm or appointments programmed.** (See page 71, 73)
-  **Level of network reception.**
-  **Voicemail message arrived.**
-  **Missed calls.**
-  **Radio is on.**
-  **Stopwatch is active.**
-  **WAP alerts** <sup>(2)</sup>.


<sup>(1)</sup> The icons and illustrations in this guide are provided for information purposes only.

<sup>(2)</sup> Depending on your network operator.

 **Roaming.**

 **Memory card scanning in progress.**

 **Memory card scanning completed.**

 **Line switching** <sup>(1)</sup>: indicates the selected line.

 **GPRS connection status** (Blue - Activated).

 **Edge attached.**

 **Edge connecting.**


 **Music player active.**

 **Message receipt in progress.**

 **Sending a message.**

 **Silence mode:** your cellphone does not ring, beep or vibrate with the exception of the alarm (see page 63).

 **Message unread.**

 **Message list is full:** your cellphone cannot accept any new messages. You must access the message list and delete at least one message on your SIM card.

 **Flight mode.**

 **A2DP connected.**

<sup>(1)</sup> Depending on your network operator.



## 2.2 Status list

The Status list contains information about significant events, like Missed calls, Unread messages, E-mails as well as the Radio & Music player current playing info., the storage status of any Memory card, etc. The purpose is to allow you faster access to the interactive applications.

Touch status bar and drag it downward to open it;

To hide it, tap  or drag it upwards.

To open an application, tap a menu when a list is open.

## 2.3 Desktop

Bring all the things you love or use most frequently to your desktop for quick access.

### Adding items

To add an item from the main menu, press and hold its icon in the main menu list.

To add a widget, touch  to open the Widget list and tap any item.

### Removing items

Touch and hold the application on the desktop until it is surrounded by a dotted line/frame, then drag it to the  icon.




### Re-organizing items

Touch and hold the application until a location frame shows up on the desktop, then drag it to the location you desire.

## 2.4 Widget list

Save time with live updates right on your desktop.

### Open/Close Widget list

Tap  to open the list. Tap  or press  to close the list. The list will automatically close after being inactive for a few seconds.

### Adding/removing widgets

See 2.3

## 2.5 Toolbar

Toolbar with 4 fixed shortcuts to access Dialer, Write message, Directory and Menu.



## 3 Dialer .....



To access this feature, you may select one of the following:

- Select directly from tool bar on Home screen.
- Select or press key to enter main menu, then tap .

### 3.1 Making a call



Enter the desired number from keypad directly or select a contact from Directory by tapping , then press key or tap to place the call. The number you entered can be saved to Directory by selecting . If you make a mistake, you can delete the incorrect digits by tapping .

To hang up the call, press the key.

### Making an emergency call

If your cellphone has network coverage, dial emergency number and press the key or tap to make an emergency call. This works even without a SIM card and without typing the PIN code.

### 3.2 Calling your voicemail <sup>(1)</sup>

Your voicemail is provided by your network to avoid missing calls. It works like an answering machine that you can consult at any time. To access your voicemail, hold down on screen keypad or on keyboard.

If the access number for your operator's voicemail service does not work, dial the number that you were given. To change this number at a later date, refer to **"My numbers"** (see page 42).



To use your voicemail service from abroad, contact your network operator before leaving.

### 3.3 Receiving a call

When you receive an incoming call, press the key to talk and then hang up using the key.

If the icon is displayed, the vibrator is activated and there is no ringtone.

If the icon is displayed, the cellphone neither rings nor vibrates.



The caller's number is displayed if it is transmitted by the network (contact your network operator to check service availability).

<sup>(1)</sup> Contact your network operator to check service availability.




## Muting the ringtone

To mute ringtone of current incoming call, tap **"Mute"** on screen or press the Volume key once.

Answer the call by pressing the  key.

## Rejecting a call

Press the  key once, or reject it by SMS (**Options\Reject by SMS\Templates**).

## 3.4 During a call <sup>(1)</sup>

### Available functions

During a call, select **"Options"** to use your directory, calendar, short messages etc. without losing your caller.

 Ongoing call

 Handsfree

**WARNING:** move the handset away from your ear while using the **"Handsfree"** option because the amplified volume might cause hearing damage.

To hold on a call, tap **"Hold"**.


You can switch the audio function from handset to BT device when connected.

## Adjusting the volume


You can adjust the sound level during a call using the Volume key.


<sup>(1)</sup> Contact your network operator to check service availability.

## Handling two calls

- Answering a second call (ensure that **"Call waiting"** is activated, see page 43).
- To call a second party during a call, select  and dial the number directly.

## 3.5 Conference calls <sup>(1)</sup>

Your cellphone allows you to talk to several people at the same time (up to five). If you are on a double call, press **"Options"** and select **"Conference"**. If a third call comes in, answer it by pressing the  key and speak with your new caller.

This caller becomes a member of the conference if you press **"Options"** and select **"Add to conference"**. Pressing  disconnects the current call.

To end the conference call, press **"Options"** and select **"End conf."**.

## 3.6 Line switching <sup>(1)</sup>

Your SIM card can contain two distinct cellphone numbers. Under **"Call register"**, choose **"Line switching"** and then select a default line; all your outgoing calls will be made from this number. Incoming calls, however, will continue to use either of the two lines.

The services programmed on the default line do not impact those selected on the other line.

<sup>(1)</sup> Contact your network operator to check service availability.



## 4 Menu arrange.....



Main menu is designed to vary according to your preference.

To access this function, select  or press  to enter the main menu, tap .

### Show/Hide

Access “**Menu arrange**”, tap the left check box of the selected menu once to show/hide, then tap “**Save**” to save the operation.

### Restore default

From main menu, select “**Menu arrange**”, then tap “**Restore default**” to return to the default menu display.

## 5 Messages.....






You can create, edit and receive SMS and MMS with this cellphone.

MMS enables you to send video clips, images, photos, animations and sounds to other compatible mobiles and e-mail addresses.



The MMS function can only be used if the service is provided by your operator, and if your contract includes the MMS option and if all the parameters for MMS have been entered (see page 32).

### 5.1 Create message

Press  from tool bar on main screen or select “**Message\Write msg**” from main menu to create text/multimedia message. One or more recipients can be added by selecting “**Tap to add recipients**”. To remove a recipient, tap . Press  to select a recipient from Directory.

An SMS will be converted to MMS automatically when: images, videos, audio, slides or attachments are inserted; Subject, CC/BCC/email address is added; or the message contains more than 8 pages of text.

You can type a message, modify a predefined message in **Templates** or customize your message by adding pictures, photos, sounds, titles, etc. (only available while editing an MMS). While writing a message, select “**Options**” to access all the messaging options.

### Timer send

Schedule a SMS/MMS to be sent out at predefined time (**Write msg\Options\Timer send**).



You can save messages that you send often to **Drafts** or **Templates** (MMS only).



An SMS message of more than a certain number of characters (the number of characters depends on your language) will be charged as several SMS. An MMS message containing photos and/or sounds may also be billed as more than one message.

## 5.2 Inbox

All received messages (read and unread) are stored in the same Inbox.

When viewing your messages, you will find the following status icons, depending on the type of message: unread SMS in cellphone, unread SMS in SIM card, read SMS in cellphone, read SMS in SIM card, unread MMS in cellphone, read MMS in cellphone, message reception in progress and message sending in progress.

### Receiving and reading SMS/MMS

Once you receive a message, the following options are given: **View**, **Reply**, **View chat history**, **Forward** the message to another person, **Delete**, **Delete all**, **Mark several**, **Move to Archive** and extract number, URL or email address (**Use number/Use URL/Send USSD/Use Email address**), **Advanced**, **Group by sender**, **Group unread messages**.

#### Group by sender/Group by receiver <sup>(1)</sup>

Messages can be grouped by sender/receiver ("**Options\Group by sender**"/"**Options\Group by receiver**"). You are able to quick search the messages by pressing the key associated with the first letter of sender/receiver's name (available only when the slide is open).

<sup>(1)</sup> The option of "**Group by receiver**" is available in Outbox, Sent, and Draft folders only.

### Group unread message

Unread messages will always be positioned above the read messages.

### Multi-mark

Mark/Unmark file(s) for further operations: **Move to archive** <sup>(1)</sup>, **Send** <sup>(2)</sup>, **Delete**.

## 5.3 Outbox

All failed to send messages.

## 5.4 Sent

All sent messages.

## 5.5 Voicemail

View and edit the voicemail number.

## 5.6 Broadcast SMS

Store the received Broadcast SMS.

## 5.7 WAP alerts

Store WAP push messages.

## 5.8 Drafts

All draft messages.

<sup>(1)</sup> Inbox/Sent folder only.

<sup>(2)</sup> Outbox only.





## 5.9 Archive

A library to store messages.

## 5.10 Empty folder

Delete all messages in “**Inbox/Outbox/Sent/Drafts...**”.

## 5.11 Templates

A list of predefined messages is available. Select one, edit it if required, and then send it. You can also create your own predefined multimedia messages.

## 5.12 Settings

### 5.12.1 Text messages

<b>Profile settings</b>	Profiles can be retrieved directly from SIM card. Alternatively, you can create your own profile.
<b>General settings</b>	Delivery report, request for acknowledgement of delivery report On/Off. Reply path <sup>(1)</sup> : show reply path.
<b>Alphabet management</b>	Enables the definition of SMS data coding for SMS sending.
<b>Memory status</b>	Memory used on the cellphone.
<b>Preferred storage</b>	Select default message storage, SIM or cellphone.
<b>Preferred bearer</b>	Bearer preference.

<sup>(1)</sup> Depending on your network operator.

### 5.12.2 Multimedia messages

<b>Edit</b>	Set slide timing, edit mode, image size signature, etc.
<b>Sending</b>	Set the values for validity period, Read report, etc.
<b>Retrieve</b>	Set the values for Home network, Roaming network, etc.
<b>Edit profile</b>	Follow the same procedure as for setting your WAP connection.
<b>Memory status</b>	Memory used on the cellphone.

### 5.12.3 Broadcast SMS <sup>(1)</sup>

<b>Receiving mode</b>	Enable to receive broadcast SMS.
<b>Languages</b>	Language selection.
<b>Channel settings</b>	Select/Add/Edit/Delete channels.

<sup>(1)</sup> Depending on your network operator.



## 6 Email .....



Your cellphone has an email client with the settings predefined for a few popular email services like – GoogleMail, Windows live, Yahoo, AOL, etc. Besides this, you can set up other POP3 or IMAP4 email accounts that you may be using.

### 6.1 Access

Press  key or tap  to enter main menu, select **"Email"**.

### 6.2 Email account set-up

#### Pre-defined email service

If you own an email account of predefined services, you can install it to your cellphone by selecting the service (GoogleMail, yahoo, etc.), entering the username, password and account name, and then confirming with "✓" on screen keypad, or "OK" on keyboard.


#### New email service

To set up a new email account other than the predefined email services, press **"Options\New account"**, select **"Other Email accounts"**.

You are required to enter your email address, display name, password, account name, then confirm with "✓" on screen keypad, or "OK" on keyboard. After you'll need to select protocol <sup>(1)</sup> (POP3 or IMAP4) and network, then enter your incoming server address and outgoing server address, select **"OK"** or **"Save"**.

<sup>(1)</sup> Consult your email service provider for more information about protocol.

### 6.3 Create Email

Select **"Email\Options\Create Email"** to enter write email interface. Press **"Tap to add recipient"** to add one more Email address, select  to add receiver from Directory.

### 6.4 Inbox

Folder of all received Emails.

### 6.5 Outbox

Folder of all unsent Emails.

### 6.6 Sent

Folder of all sent Emails.

### 6.7 Drafts

Folder of all draft Emails.



## 6.8 Available options

<b>Select</b>	Select to enter the menu.
<b>Send and receive</b>	To connect the email server in order to receive/send mails.
<b>Send and receive all accounts</b>	To connect all email accounts' server in order to receive/send mails.
<b>Create Email</b>	To create a new Email.
<b>Edit account</b>	To edit the detailed configuration information of the selected account.
<b>Delete account</b>	To delete the current selected account.
<b>New account</b>	To create a new email account.
<b>Templates</b>	A list of predefined messages.
<b>Empty folder</b>	Delete all emails in " <b>Inbox/Outbox/Sent/Drafts</b> ".
<b>Empty all folders</b>	Delete all emails in all folders.
<b>Delete marked</b>	To delete the marked mail in the selected folder.
<b>Delete all</b>	To delete all the mails in the selected folder.
<b>Delete all marked</b>	To delete all marked mails in all folders.

## 7 Instant messaging <sup>(1)</sup> .....

Palringo Instant messaging (IM) allows you to chat with other people using Palringo account. You can also connect to other popular IM services through Palringo, like Yahoo, AIM, GG, ICQ, Google talk, iChat etc.

Please note that the services may be upgraded depending on your client version.

### 7.1 Access

To access Palringo, press  key or tap  to enter main menu, select .

### 7.2 Open a Palringo account online

Before activating this service, you are required to open a Palringo account online. There are two ways to do this:

- Click "**Menu**", select "**Register**".
- You can also open account directly on website:  
<http://www.palringo.com/en/gb/>.

### 7.3 Sign in/Sign out

To connect to Palringo instant messaging server, please click "**Menu**", then select "**Sign in**". You are required to input your Palringo account information, like username (Email address), password, sign in status, etc.

To sign out, click "**Menu**", then "**Sign out**".

<sup>(1)</sup> Depending on your network operator.



## 7.4 Add service

Various services (Yahoo, Google, ICQ etc.) can be added by “**Menu\**Services\Add Service”.

## 7.5 Chat

To start a chat, select one online contact, then “**Menu\Private chat**”.

During chat, you can also exchange voice or photo messages with your community.

## 7.6 Contacts

### Add a contact

To add a contact, click “**Menu**”, then select “**Add contact**”.

First, you need to specify which service, Yahoo for example, you want to add the new contact to. Then input the contact's email address.



Your request will be sent to the contact for approval. Once accepted, the contact's name and status will appear on your contact list.

### Delete a contact

To delete a contact, select one contact, then “**Menu\Delete contact**”.

The selected contact will be removed from your contact list.


## 7.7 Groups

With this menu, you can “**Join a group**” or “**Create a new group**”. You can begin chatting with all members in the group simultaneously.

# 8 Directory .....



## 8.1 Consulting your directory

To access the Directory, tap  from tool bar on main screen, or select “**Directory**” from main menu.

You have 4 directories:



General



SIM directory




Phone directory




Group

In addition to the directories already provided, you can create up to 4 groups (maximum 100 entries per group).

### Searching for a contact

- select “**Search**” on the bottom bar, then enter the first and subsequent letters of a name for exact searching.
- drag  down until the cursor reaches the initial letter of the name you are looking for. Release and scroll down to find the contact you need. When dragging, a semi-transparent index of the current letter will appear for guidance.

### Viewing a contact




Select a name from your directory to read the contact information. Tap  to call, tap  to send message.



## Sending vCard via Bluetooth

Selecting the vCard you wish to transfer (“**Options**”**Send vCard**By Bluetooth”).

### Making the call

Press the  key or tap  once the name is selected. If several numbers are associated with the name to be called, you must first tap the contact name to choose the number from the list (Mobile, Home, Office, etc.). Tap  to make the call.

Information in the directory and the calendar may be sent to and received from a computer using the PC suite.

## 8.2 Adding a contact

Select the directory in which you wish to add a contact, press “**Options**”, select “**Add contact**”.

When you create a new contact in the phone directory, at least one of the following fields must be filled in:  First name,  Last name,  Group,  Cellphone,  Home,  Ringtone,  Image,  Video,  Work,  Fax,  Email,  IMPS ID,  Birthday,  Company,  URL.


You can move from one field to another by scrolling up and down or using the Volume key.



If you use your cellphone abroad, store the numbers in your directories in international format “+” followed by the country code (see page 23).

## 8.3 Available options

From the list of names in SIM directory, General directory or Group you can access the following options:

<b>View</b>	View a complete file: name, numbers, address, e-mail, etc.
<b>View chat history</b>	Display chat logs in chronological order.
<b>Add contact</b>	Add a contact (name, numbers, address, e-mail, etc.) in the desired directory.
<b>Dial</b>	Make a call
<b>Create group</b>	Create a group of files.
<b>Send message</b>	Send an SMS/MMS/Email to a contact you selected from the directory.
<b>Edit</b>	Modify the contents of a file: name, number, ringtone, image, etc.
<b>Delete</b>	Delete the selected file.
<b>Mark/Unmark</b>	Mark/Unmark a tick on a contact for further operation. Tap  on Mark menu to mark all directly.
<b>Delete group</b>	The group and its files will be completely deleted.
<b>Send vCard</b>	Exchange data via SMS, MMS, Email, Bluetooth or save to memory card.
<b>Associate/ Not associate</b>	Sets whether or not the entry in a group will be updated if the original entry in the SIM or General directory is changed.






<b>More</b>	<b>Copy to phone/ SIM</b>	Copy a file from SIM directory to Phone directory, vice versa.
	<b>Copy all to phone/ SIM</b>	Copy the whole directory to the SIM or General directory only if there is sufficient memory.
	<b>Move to phone/ SIM</b>	Move a file from SIM directory to Phone directory, vice versa.
	<b>Move all to phone/ SIM</b>	Move all files from SIM directory to Phone directory, vice versa.
	<b>Add to group</b>	Add a contact to a group
	<b>Delete all</b>	Delete all the files in the current directory.
	<b>My number</b>	Type in, modify or send the user's own number by SMS.
	<b>Memory status</b>	View used and available space in SIM and Phone directory.
	<b>Default storage</b>	Set default storage to store new contacts.
	<b>Display format</b>	Select the format for name display.

## 9 Call register.....

### 9.1 Call memory

You can access your call memory by pressing the  key from the main screen or selecting  from main menu, then tap **“Call memory”**.

Choose the option of the desired list:

-  Missed calls
-  Outgoing calls (Redial)
-  Answered calls

Tap a number from the call memory or press **“Options”** to **View** call details, **Create text/multimedia message**, **Edit**, **Save** or **Delete** the selected number or clear the entire list (**Delete all**).

To make a call to a contact, tap  to the right of the name.

### 9.2 My numbers

Type in or modify your cellphone number or the number to access your voicemail and confirm by pressing **“OK”**.



## 9.3 Billing<sup>(1)</sup>

You can access different items with this option:

<b>Amount</b>	You can view the total cost of charged calls, modify it or reset it and enter the cost of a Telecom Unit in the currency of your choice.
<b>Duration</b>	You can view the total duration of all outgoing calls or reset it.
<b>GPRS counter</b>	Management of the volume of data communications charged for (in kilobytes).
<b>Beep duration</b>	You can activate or cancel the beep emitted during a call with a specified frequency (enter the frequency and confirm by “√” on screen keypad, or “OK” on keyboard.).

## 9.4 Call settings<sup>(1)</sup>


You can access a number of items with this option.

### 9.4.1 Call waiting

Activate/deactivate the notification of a second incoming call by a beep.

### 9.4.2 Call forwarding

You can activate, cancel or verify the status of the call forwarding to the voicemail or to a specified number. The following configurations are possible:

- Unconditional: systematic forwarding of all your calls. The  icon is displayed.
- Conditional: if your line is busy, if you don't answer or if you are outside the network range.

### 9.4.3 Call barring

You can activate or deactivate the call barring for outgoing and incoming calls. The various options are:

#### Outgoing calls

The following configurations are possible:

- **All calls** All outgoing calls are barred.
- **International calls** Outgoing international calls are barred.
- **International except home** Outgoing international calls except those to your country of subscription are barred.

#### Incoming calls

The following configurations are possible:

- **All calls** All incoming calls are barred.
- **Roaming** Incoming calls are barred when you are abroad.

#### Cancel all barring

Deactivate all call barring.

#### Change barring PW

Change the original PW for activating call barring.

<sup>(1)</sup> Contact your network operator to check service availability.



#### 9.4.4 Caller ID

Activate/deactivate CLIR.

#### 9.4.5 Line switching <sup>(1)</sup>

Line switch between line 1 and line 2.

#### 9.4.6 Auto redial

You can activate or deactivate the automatic callback of your party for calls that do not get through the first time.

<sup>(1)</sup> Depending on your SIM card.

## 10 Media applications.....


### 10.1 Music player .....



Access this feature from the main menu by selecting “**Music player**”.

You will have full flexibility of managing music both on your cellphone and memory card.

 
You can have access to your music files through one of the following:

- |                           |   |
|---------------------------|---|
| <b>All songs</b>          | Contains all songs both on cellphone memory and memory card.  |
| <b>My star list</b>       | You can simply add your favorite songs to “ <b>My star list</b> ” by tapping on the screen or holding down the  key during music playback (max 100). |
| <b>Folders</b>            | Category of songs in folder.  |
| <b>Album/Artist/Genre</b> | Music files are categorized by Album, Artist or Genre based on information stored in the tags. Those missing such information will be classified as “ <b>Unknown files</b> ”.   |
| <b>Update songs</b>       | Update the information of songs saved in cellphone or memory card.  |





### 10.1.1 Music playing mode

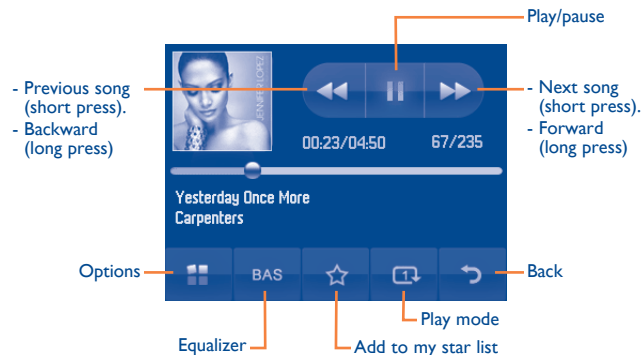

To adjust the volume, use the Volume key.

### 10.1.2 Settings

Access by pressing the right navigation key for following options:

#### Play mode

Normal, Repeat current, Repeat all, Shuffle and Repeat shuffle. You may also customize it simply by tapping on the screen or pressing key during playing music.

#### Equalizer

Different music styles preset in the cellphone for your selection. You may also customize it simply by tapping on the screen or pressing key during playing music.

#### Play in Bluetooth/ Play in phone/ Play in Phone & Bluetooth

Play music in Bluetooth, Phone or both in Phone & Bluetooth. In playing screen, press the key to shift between play in speaker and play in BT stereo headset.

#### Display

Enable your player to display song info. or lyric.

### 10.1.3 Playing with lyrics

Lyrics can be displayed in synchronization with the music.







## 10.2 Image Viewer .....




A library links to the pictures in “**My creations**” in cellphone to be shown in list, slide, or thumbnail, set as Wallpaper, Screen saver, Power on/off display, and Contact ID, or sent by MMS, Email, Bluetooth.

Useful icons:

-  Set as wallpaper
-  List view
-  Delete
-  Back

 Tap a picture once to view it in full screen:

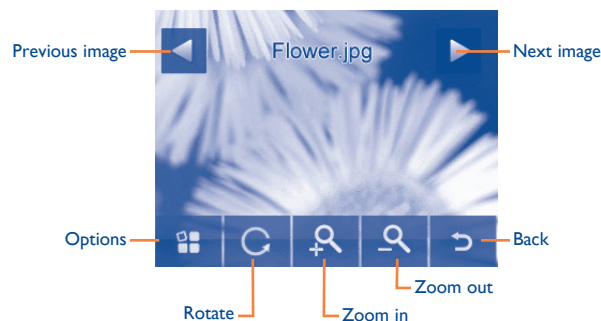

## 10.3 Video player .....








Contains all video clips both in cellphone and memory card and enables you to **Play**, **Set as** contact ID, **Mark/Unmark**, **Send** (by MMS, Email, or Bluetooth), **Delete**, **Delete all**, **Rename**, **Sort** (by name, type, time or size) and copy or move the video/videos, and to Download/Capture new video clips.

### Streaming URL

This feature enables the user to start watching video almost as soon as it begins downloading from internet.

Useful icons/keys:

-  Switch between Normal screen and Full screen display.
-  Set as play/pause
-  Set the volume level
-  Previous/next video
-  Back to previous menu.



## 10.4 Radio .....



Your cellphone is equipped with a radio <sup>(1)</sup> with RDS functionality. You can use the application as a traditional radio with saved channels or with parallel visual information related to the radio program on the display if you tune to stations that offer Visual Radio service. You can listen to it while running other applications.



To use it, you must plug in your headset, which works as an antenna connected with your cellphone.

### Available options:

<b>Stop</b>	Stop playing the radio.
<b>Channel list</b>	Open the list of saved stations.
<b>Auto search</b>	Start auto search and stations will be automatically saved to “ <b>Channel list</b> ”.
<b>Enter the frequency</b>	Enter the frequency manually.
<b>Save channel</b>	Save the current tuned station to the “ <b>Channel list</b> ”.
<b>Record</b>	Record the radio: files will be automatically saved to “ <b>Notes</b> ”.
<b>Settings</b>	Scroll up and down to manage settings.
<b>Activate loudspeaker/Play in headset</b>	Listen to the radio using loudspeaker or headset.

<sup>(1)</sup> The quality of the radio depends on the coverage of the radio station in that particular area.

## Internet <sup>(1)</sup> .....

### 11.1 My friends .....



It migrates self-contained sub-trees of the websites to let you stay in touch with your friends by flicking through Bebo, Facebook, Friendster, Hi5, Myspace, etc.

### 11.2 Opera .....



Not only does Opera Mini give you the full Web experience where you stay in touch with your friends, obtain information, do your online banking etc., but it is also designed to save time by using compressed web pages.

### 11.3 Web.....



#### 11.3.1 Homepage

Launch the Web browser with the preset homepage.

#### 11.3.2 Bookmarks

Access your favorite sites.

<sup>(1)</sup> Depending on your network operator. May cause additional network charges for data flow to provide this service. Extra fees might also be charged in roaming states.



### 11.3.3 Go to URL

Enter the URL of Web site.

### 11.3.4 Last web address

Last visited URL.

### 11.3.5 Recent pages

Pages which you recently browsed.

### 11.3.6 Offline pages

Pages available for offline viewing.

### 11.3.7 Service inbox

Store WAP push messages.

### 11.3.8 Settings

Customize your browser preferences.

## 11.4 News .....



It is a huge time saver providing news updates from a website in a simple form.

Once subscribed to a channel, it gives you the ability to track and manage all your favorite RSS content on your cellphone at anytime, anywhere!

#### Available options:

<b>View</b>	Message title or message summary of a channel with URL will be shown.
<b>Update</b>	Refresh the content of a channel.
<b>Create channel</b>	Create a new channel with name and URL.
<b>Delete</b>	Delete the channel.
<b>Edit</b>	Edit the name or URL of a channel.
<b>Update all</b>	Refresh all channels.
<b>Settings</b>	Select a regular interval to retrieve updates automatically, set to show images or not, as well as a WAP account to connect to.
<b>Enable/Disable all auto-update</b>	Activate auto-update or not to all channels.
<b>Send</b>	Share a channel with your friend by sending it by SMS, MMS or Email.





## 11.5 Weather .....



Your cellphone is equipped with a weather function for consulting up to 3-day forecasts of favorite cities.

To access the function, press the  key to access the main menu and select .

Tap /scroll left or right to switch the cities, tap /scroll up or down to view 3 day's weather info of the selected city.

 Tap “**AccuWeather.com**” to access online website, which may charge extra fee.

### Available options:

<b>More info</b>	Search more weather info online.
<b>Forecast</b>	Display 3-day weather forecast.
<b>Update</b>	Refresh weather information.
<b>My cities</b>	List all my cities, you can add new city, set default city, delete the selected city, etc. via “ <b>My cities\Options</b> ”.
<b>Settings</b>	Set unit, update mode and network.

## 12 Entertainment .....

### 12.1 Stopwatch.....



The stopwatch is a simple application for measuring time with the possibility to register several results and suspend/resume measurement.

### 12.2 Ebook <sup>(1)</sup>.....



A bookshelf contains the electronic books (.txt and .pdb file only). While reading the book, you may add bookmarks, or reach the text by searching words, phrases (**Options\Search**, **Options\Jump to**).

### Available options:

<b>Open</b>	Open the current ebook
<b>Book info</b>	Display the detailed info (title, size and format) about the book.
<b>Delete</b>	Delete the current book.
<b>Delete all</b>	Delete all the books.
<b>Sort</b>	Sort the books by name, type, time or size.
<b>Global settings</b>	Set the font, scroll mode, display format, storage, etc.
<b>Help</b>	List all hotkeys.

<sup>(1)</sup> This menu is hidden by default, you can make it visible in main menu (see page 27).



To avoid character corruption, please ensure that the encoding format is correct (**Global settings** or **Settings\Encoding format**).

## 12.3 Java.....



### 12.3.1 Launch an application

Select **"Java applications"** to launch applications.

### 12.3.2 Java settings

The **"Java"** menu allows you to manage Java settings, in which you may set Java audio, vibration, network and identify how much Heap size is available.

### 12.3.3 Java downloading

You can download new Java™ applications in the **"Java"** menu by selecting **"Download application"**. The list of available Web bookmarks dedicated to the application download will then be displayed.

Select the appropriate bookmark to go to the desired Web page.



Each downloaded Java game can be assigned as a main menu for quick access.

## 12.3.4 Trusted certificates

View detailed info of the trusted certificates supported by your cellphone.

### Disclaimer

Downloading or running applications will not damage or alter any software already in your cellphone designed to support Java™ technology. TCT Mobile Limited and its affiliates waive any responsibility and refuse to guarantee applications that are subsequently used, as well as for all applications not embedded in the handset upon purchase. The purchaser alone bears the risk of loss, damage or defect of the handset, or of applications/software, and generally of any damage or consequence resulting from the use of the said applications/software. In the event that the said applications/software, or the subsequent setup of any function are lost due to technical reasons resulting from the handset being replaced/ repaired, the cellphone owner should repeat the operation and download or set up again. TCT Mobile Limited and its affiliates grant no guarantee and disclaim any responsibility if the operation cannot be repeated or cannot be performed without incurring some cost.





## 13 Camera.....



Your cellphone is fitted with a camera for taking photos and shooting videos that you can use in different ways:




- store them in your **“File manager\My creations”**.
- send them in a multimedia message (MMS) to a cellphone or an email address.
- send them directly by Email or Bluetooth.
- customize your main screen (see page 75).
- select them as incoming call image to a contact in your directory.
- transfer them by data cable or microSD card to your computer.

### 13.1 Access

To access the function from the main screen, press the  key to access the main menu and select the  icon.

### 13.2 Camera

#### 13.2.1 Take a photo, save or delete

The screen acts as the viewfinder. Position the object or landscape in the viewfinder and press  /  or tap anywhere on screen other than left and bottom bar to take the picture and the pictures will be automatically saved. If you don't want it, you may directly delete it by tapping .

#### 13.2.2 Settings in framing mode

Before taking the photo, you can adjust a number of settings by using the following shortcuts:

From the photo shot screen, press  not only to access: **“Image size”**, **“Capture mode”**, **“Quality”**, **“Timer”**, **“Night mode”**, **“Exposure Value”**, **“Color mode”**, but also following ones:

##### My creations

Go to **“File manager\My creations”** to view the photos you have taken.

##### Storage

You may choose saving location if MicroSD card is inserted.



Image size



Capture mode



Quality



Timer



Night mode



Exposure Value



Color mode



My creations



Storage

#### 13.2.3 Options available after taking the photo

Once you have taken a photo, five icons appear on the photo so you can choose to send your photo by Bluetooth, MMS and Email, assign it to a contact, or set it as wallpaper.

### 13.3 Video


You can record a video clip of unlimited length, as long as the battery sustains and there is sufficient memory.





We strongly advise you to change the default folder to **“Memory card”** to store your photos and videos.



### 13.3.1 Framing mode

When you enter the “**Video**” function, you are in Framing mode. Use the cellphone screen as a viewfinder and press  for the **Capture mode**, **Exposure Value**, **Night mode**, **Quality**, **Record audio**, **Color mode**, and **Storage** settings, and to access “**File manager/My videos**”.

### 13.3.2 Recording mode

Once you have chosen your settings, you can launch the recording of your video-clip by pressing the  /  key or by tapping anywhere on the screen other than the left and bottom bar.



If you receive a call in recording mode, video recording will be stopped and a pop up message will inquire if you want to save it.

### 13.3.3 Further operations after shooting a video

After shooting a video, three icons will appear on the screen so you can choose to send your video by Email, MMS, or Bluetooth.

In the list of “**My videos**”, press “**Options**” to play the video, set as contact ID, Rename, etc.

## 4 Profiles.....



With this menu, you may personalize ringtones for different events and environments.


### 14.1 General

To modify the sound settings within any profile, press “**Options**” and select “**Edit**” and you will see the functions below by scrolling up/down or using Volume key:

#### Ringtone

Select a melody from the list by scrolling up and down or using the Volume key then confirm by pressing “**OK**” (see page 47).

#### Mode

You may set your cellphone ringtone to Normal, Discreet (ring with beep), Vibration (all sounds are replaced by vibrations except for alarms), Vibration and Melody, Vibration then Melody, Beep and Vibration, Silence (no sounds except for alarms, the  icon will be displayed).

#### Volume

Adjust the volume using the Volume key.

#### Key beep

Select the type of key beep.

#### Message beep

Select a melody for a new incoming message.

#### Power on beep

Select a Power on melody for your cellphone.

#### Power off beep

Select a Power off melody for your cellphone.





## 14.2 Meeting

When this is selected the cellphone will not ring or beep unless an alarm has been set. A new event will cause it to vibrate.

## 14.3 Outdoor

It is a profile designed for outdoor users who require louder ringtones.

## 14.4 Indoor

Ringtone/beep volume will be slightly lower than General mode volume.

## 14.5 Silence

This profile will turn off all ringtones, including notification sounds.

## 14.6 Flight mode

Voice calls, Bluetooth and messaging functions are barred. Can be used to increase standby duration.

# 15 File manager .....



You will have access to all audio and visual files stored in cellphone or memory card in File manager.

Two icons behind will indicate the saving locations of each file:

 Saved in cellphone

 Saved in memory card

## 15.1 My audios

Choose an audio file for an incoming call ringtone, a message alert beep, power on/off ringtone, contact ID tone or an alarm and appointment alert beep.

The “My audios” album contains the following folders <sup>(1)</sup>:

- Music: full track music.
- Melodies: melodies that can be set as ringtone.
- Recorded: all recorded sounds.
- General: contains all audio files stored in cellphone or memory card.



DRM: Digital Rights Management feature allows sounds and images to be played while protecting the associated copyright. DRM counter-based files and files with expired rights will not be automatically played when scrolling the list.

<sup>(1)</sup> The embedded folder names cannot be modified. However, in certain cases, you can modify, delete and add items included in these folders.



## 15.2 My images

You can select an image or a photo as wallpaper, ON/OFF screen, or assign it to a contact in the directory.



The images will be displayed in alphabetical order.

## 15.3 My videos

The “**My videos**” album contains all video clips recorded by the user, originally embedded in the cellphone and downloaded to the cellphone or memory card.

## 15.4 Ebook

A bookshelf containing the electronic books (.txt and .pdb files only).

## 15.5 My creations

This feature stores all the photos captured by your cellphone.

## 15.6 Unknown files

Store files of unsupported format.

## 15.7 Cellphone

An access point for all files in all folders stored in cellphone.

 
## 15.8 Memory card

You can access all files stored in the memory card here.



When a memory card is inserted for the first time, it will be scanned and default folders will be created.

### Inserting the memory card:

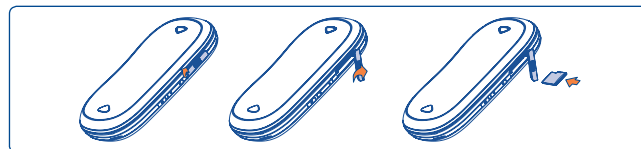

- Unclip the cover and insert the MicroSD card with golden contact downwards into the slot.
- Unclip the cover and gently push the memory card until unlocked.
- Take out your MicroSD card and clip the cover closed.


### Available options

<b>Create folder</b>	Create more folders.
<b>Delete folder</b>	Remove folders.
<b>Rename folder</b>	Edit folder's name.
<b>Empty folder</b>	Delete all files in one folder.
<b>Memory card</b>	To format or to query its memory status.



## 15.9 Managing audios, images, videos and creations

According to the item chosen, you can access some of the functions below:

<b>View</b>	View the selected image.
<b>Play</b>	Play the selected video.
<b>Send <sup>(1)</sup></b>	Send the audio/image/video.
<b>Delete</b>	Delete the audio/image/video selected (not applicable for embedded items).
<b>Set as</b>	<ul style="list-style-type: none"><li>• Image→wallpaper, screen saver, switch ON/OFF, assign it to a contact.</li><li>• Sound→ringtone, message beep, switch ON/OFF, assign it to a contact.</li><li>• Video→Assign it to a contact.</li></ul>
<b>Mark/Unmark</b>	Mark/Unmark a tick on a file for further operation.  Tap  on Mark menu to mark all directly.
<b>Download</b>	Download new items.
<b>Rename</b>	Rename the audio/image/video.
<b>Sort</b>	Sort the files by name, type, time and size.
<b>Move to phone/ memory card</b>	Move a file from the product memory to the memory card and vice-versa
<b>Properties</b>	Display part of the ID3 Tag content of an MP3 file.

<sup>(1)</sup> Files marked with  cannot be sent.

### Activate

DRM file option.

### Copy to phone/ memory card

Copy a file to the cellphone memory or the memory card.

## 15.10 Formats and compatibility <sup>(1)</sup>

- Sounds: mp3, m4a, aac, midi, wav, amr, wma
- Images: jpg, gif
- Videos: 3gp, mp4

### 15.11 Memory status

Indicates how much space is used and how much is currently free on your cellphone and memory card (if any).

#### 15.11.1 Cellphone

View available memory space.

Your cellphone's memory is shared among several functions: directory, calendar, messages, images, melodies, games and video clips.

#### 15.11.2 Memory card (MicroSD card)

View the memory available on your MicroSD card.

You are advised to save large files (like songs) on your microSD card.

<sup>(1)</sup> Depending on product and market.



# 16 Bluetooth™ (1) .....



Access this feature by pressing  to enter the main menu, then selecting **“Bluetooth”**.

To use your cellphone with a Bluetooth device, you need to proceed in two steps:

- Pair and register the device to your cellphone,
- Select it to use hands-free communication. Only one Bluetooth audio device (your Bluetooth headset or your Bluetooth car kit) can be connected during the communication.

## Pair and register your Bluetooth device

Activate the Bluetooth feature by selecting the **“Bluetooth\Activation\On”** option. Then enter the **“Device list”** menu to search for connectable Bluetooth devices and select the device you want to be paired with in the list. If the bluetooth device has no keyboard, enter its default password to register it with your cellphone. If the Bluetooth device has keyboard/ keypad, enter the same set of password on both handset and the device to get it registered.

From the list, press **“Options”** to connect/disconnect, rename, search for new devices or delete an unconnected one from the list.



Don't forget to turn on your Bluetooth device and activate the pairing mode while pairing it with your cellphone.

(1) You are highly recommended to use Alcatel OT-BM82 (mono) Bluetooth headset, which has been tested and proved fully compatible with OT-880A.

## Available functions

<b>Data transmit</b>	Exchange files with another bluetooth device.				
<b>Handle a call</b>	Initiate or receive a phone call with a Bluetooth headset.				
<b>Listen to music</b>	Support A2DP profile.				
<b>PBAP (Phonebook access profile)</b>	Make contacts in Directory & Call memory easily accessible and even directly operated on car kit or Bluetooth headset if PBAP supported.				
<b>Settings</b>	<table><tr><td><b>Visibility</b></td><td>Select whether you want to hide (<b>“Hidden”</b>) or show to all (<b>“Visible to all”</b>) your cellphone.</td></tr><tr><td><b>My phone's name</b></td><td>You may change your cellphone name, which is visible to the others.</td></tr></table>	<b>Visibility</b>	Select whether you want to hide ( <b>“Hidden”</b> ) or show to all ( <b>“Visible to all”</b> ) your cellphone.	<b>My phone's name</b>	You may change your cellphone name, which is visible to the others.
<b>Visibility</b>	Select whether you want to hide ( <b>“Hidden”</b> ) or show to all ( <b>“Visible to all”</b> ) your cellphone.				
<b>My phone's name</b>	You may change your cellphone name, which is visible to the others.				



Always activate Bluetooth in your cellphone first before connecting it to a Bluetooth device. Be aware that Bluetooth activation will slightly affect battery life of your cellphone.

Bluetooth technology allows free wireless connections between all Bluetooth-compliant devices within short range. Please make sure that the Bluetooth headset or the Bluetooth car kit and your cellphone are in this range and set as **“Visible to all”**.

Your cellphone is Bluetooth™ v1.1, v1.2 and v2.0 compatible.



## 17 Others.....

### 17.1 Calendar .....



Once you enter this menu from the main menu, there is a monthly-view calendar for you to keep track of important meetings, appointments, etc. Days with events entered will be marked in color.

#### Available options:

<b>Settings</b>	Set the first day of the week and the first week of the year.
<b>View today's appointments</b>	See today's appointments.
<b>List all appointments</b>	See all the created appointments.
<b>Jump to date</b>	Input the required date and it will be immediately highlighted.
<b>Create</b>	Create an appointment.

### 17.2 Calculator .....



Access this feature by selecting "**Calculator**" from the main menu.

Enter a number, select the type of operation to be performed, and enter the second number, then press "=" to display the result.

Once an operation is complete, you can select "C" to clear numbers and carry out a new operation.

To return to the main screen, press .

### 17.3 Notes.....



You can create a note in text or voice format by accessing "**Notes**" from the main menu.

#### Available options:

<b>Open</b>	Open and view note.
<b>Send</b>	Send by SMS, MMS, Email or Bluetooth.
<b>New text note/voice memo</b>	Add new text note or voice memo.
<b>Delete</b>	Delete note.
<b>Delete all</b>	Delete all notes.
<b>Input mode</b>	Select input method.
<b>Language</b>	Select language.

While recording a voice memo, you can define the audio format (AMR, WAV or AWB), Quality (High/Low), and Storage (Cellphone, memory card).



## 17.4 Tasks .....



Enables you to easily manage and track the progress of a task with priorities. All the tasks will be sorted by due date.

### Available options:

<b>View</b>	View current task
<b>Create</b>	Add new task
<b>Delete</b>	Delete the current task
<b>Mark as done/Mark as not done</b>	Change task's status

## 17.5 Clock .....



### 17.5.1 Alarm

Your cellphone has a built-in alarm clock with a snooze feature. You can set up to five separate alarms and choose whether or not the alarm should repeat. Tap to edit the alarm.

<b>Repeat</b>	You may select <b>Once</b> (default)/ <b>Every day/Days</b> or customize to your desire.
<b>Snooze</b>	The alarm will repeat at regular intervals.
<b>Mode</b>	You may select the mode of Ringtone: <b>Ring</b> , <b>Vibration only</b> , <b>Silence</b> , <b>Radio</b> <sup>(1)</sup> or <b>Vibration and Ring</b> .

<sup>(1)</sup> In Radio mode, you are required to plug in headset first. Your cellphone will power on automatically before Radio is on.

### 17.5.2 World clock

The World clock shows current local time and the time zone in different cities. You may view up to 3 cities at one time (**Options\Set as my city**).

### 17.5.3 Clock

Allows you to have settings of date and time, including 12/24h format.

You can also set the daylight saving adjustment.

## 17.6 Converter .....



### 17.6.1 Unit converter

You can use the Weight and Length conversion by selecting the unit you wish to convert via , then tap to input the digits. Finally confirm with "" on screen keypad, or "OK" on keyboard.

### 17.6.2 Currency converter


The currency converter allows you to:

- Convert a currency directly into euros and vice versa <sup>(1)</sup>.
- Convert between international currencies, both currencies must be selected by tapping . You are requested to input the appropriate exchange rate.

<sup>(1)</sup> For the former European national currencies, the currency converter uses the final Euro conversion rates set on 31/12/1998, which are used in accordance with official conversion rules.



# 18 Settings.....

From the main menu, select the menu icon  and select the function of your choice in order to customize your cellphone.

## 18.1 Cellphone settings

### 18.1.1 Display

#### Wallpaper

The wallpaper is displayed when you switch on your cellphone.

By selecting **“Wallpaper”** you can customize it by replacing the default image or animation displayed on your cellphone.

#### Screen saver

If you activate this option, the screen saver will be displayed a little while after the wallpaper. You can choose a picture or an animation as your screen saver.

#### Theme

This function enables you to customize the graphic style and the colours of your cellphone.

#### Power On/Off<sup>(1)</sup>

You can customize your welcome animation or image that appears when you switch on your cellphone.

You can also customize your OFF screen with an image or animation.

<sup>(1)</sup> Depending on the model.


#### Brightness

You may adjust black level with respect to LCD display by pressing the key .

#### Backlight

- **Screen** Allows you to reduce brightness for enhanced battery performance and to save power during periods of expected inactivity.
- **Keypad** You may customize your keypad light by selecting **On/Off** or inputting your preferred duration directly.

### 18.1.2 Languages<sup>(1)</sup>

Display language for messages (select using ). The **“Automatic”** option selects the language according to the home network (if available).

### 18.1.3 Headset mode

Switch audio play (incoming call, message beep, alarm beep...) between **Headset only** and **Phone&Headset**.

### 18.1.4 Touch settings

- LCD Touch Calibration** To calibrate the touch screen, tap anywhere on the screen to start calibration.
- Touch Vibration** When **“On”**, the cellphone vibrates when the screen is touched.

<sup>(1)</sup> Contact your network operator to check service availability.




### 18.1.5 Numeric keys

By customising your keys, you can access any function directly from the main screen.

### 18.1.6 Auto lock

Your keypad will be locked automatically or you may lock it manually with a short press of the  key.

#### Unlock the keypad

- Short press  when locked.
- Drag the key on the screen to the lock icon.
- Open the slider



The keypad will be unlocked automatically on receiving a call or plugging in the charger.

### 18.1.7 Screen lock during call

Select “On”/“Off” to activate/deactivate screen lock during call.

### 18.1.8 Input mode<sup>(1)</sup>

Please see chapter “Latin input mode”, page 81. In addition to the specific characters table for Cyrillic, Chinese, other data input modes are also available in your cellphone. This feature allows you to write short messages and add names with special characters to your directory.

### 18.1.9 Vocabulary

You have a vocabulary to which you can add your own words in addition to those suggested by the predictive input system. When you consult your vocabulary, you can add, modify or erase words by using the “Options” softkey.

<sup>(1)</sup> Depending on your network operator.

## 18.2 Call settings

See page 43.

## 18.3 Security

### Activate PIN

The SIM card protection code is requested each time the cellphone is powered on if this code is activated.

### Change PIN

Change PIN code.

### Change PIN2

A protection code for certain SIM card features (Billing/Cost/FDN, etc.) will be requested if you attempt to access it, if the code is activated. Select to update it with a new one (between 4 and 8 digits).

### Activate phone code

Code is requested each time the cellphone is powered on.

### Change phone code

Change cellphone password, its initial one is 1234.

### Fixed dialed number


Allows the cellphone to be “locked” so that it can only dial certain numbers, or numbers with certain prefixes. To activate this function, PIN2 code is mandatory.





## 18.4 Networks

### Network selection

**Preferred network** List of networks to which you wish to be connected in order of priority (update this list using .

**Select network** The choice of network connection is left up to the user.

**Search mode** Network connection can be switched between “**Manual**” and “**Automatic**”.

### GPRS connection <sup>(1)</sup>

**When needed** GPRS mode active depending on connection requirements.

**Always** GPRS mode continuously active.

**GPRS international roaming** GPRS data services can be used while roaming overseas.

## 18.5 Connectivity

A set of profile settings for messaging (MMS, Email...) and Web connection.

<sup>(1)</sup> Depending on network availability.

# 9 Making the most of your cellphone .....

## 19.1 PC suite

You can download software upgrade for free from the website. The PC suite includes:

- **Backup/restore**  
You can backup the important data in your cellphone and restore them when needed.
- **GPRS Modem**  
Use your cellphone to connect PC to the internet.
- **Multimedia Personalization**  
Customize your cellphone with images, animations and melodies.
- **Messaging**  
You can compose SMS/MMS easily on your PC and transfer them to your cellphone.

### Supported Operating Systems

Windows 2000/XP/Vista/Windows 7.

## 19.2 Webcam <sup>(1)</sup>

You can use your cellphone as a webcam for instant messaging on your PC.

- Connect your cellphone to PC via USB cable.
- Go to “**My computer**” folder on your PC and find USB video device (Under Scanners & Cameras).

<sup>(1)</sup> The using of webcam may vary according to the operating system of your PC.



## 20 Latin input mode/ character table <sup>(1)</sup>.....

To write messages, there are two writing methods:

- Normal
- Predictive with the eZi mode

### Normal

This mode allows you to type text by choosing a letter or a sequence of characters.

### Predictive eZi mode

This mode speeds up the writing of your text.

Press the key once and the word will be modified each time you press a key. As you go on, the word will keep changing.

### Keyboard inputting



key:

- Press once: input a top-half character.
- Press twice: top-half characters inputting mode.

Caps key:

- Short keypress: Switch between abc/Abc/ABC/123
- Long keypress: Switch from eZi predictive mode to Normal mode

key:

- Short keypress: access the Symbols table
- Long keypress: access the language list

key:

- Short keypress: delete one by one.
- Long keypress: delete all.

 
key:

- Validate the word
- Enter the next line

<sup>(1)</sup> For specific languages as Chinese, please see specific input leaflets.




## Touch inputting

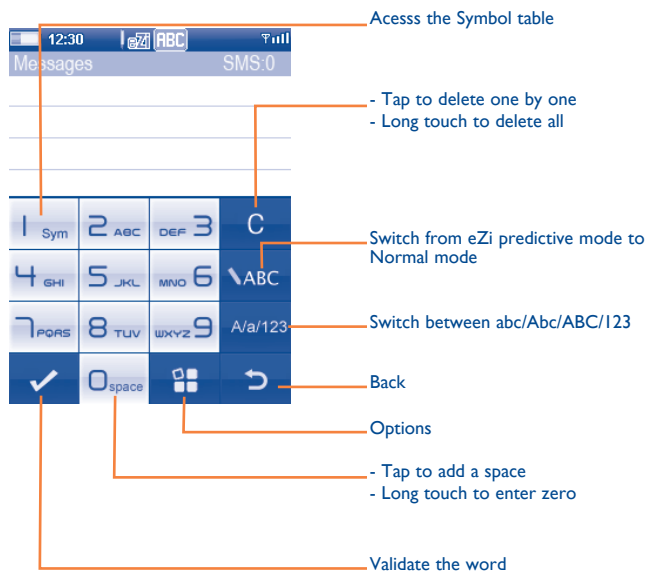

## Symbol table

 Tap the  key to display the symbols table; Tap  to access emoticon list <sup>(1)</sup>.

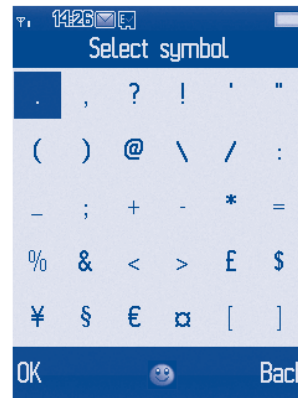

<sup>(1)</sup> Icons would be automatically transformed to a textual one.



## 2 | Warranty.....

Your cellphone is warranted against any defect which may occur in conditions of normal use during the warranty period of twelve (12) months <sup>(1)</sup> from the date of purchase as shown on your original invoice.

Batteries <sup>(2)</sup> and accessories sold with your cellphone are also warranted against any defect which may occur during the first six (6) months <sup>(1)</sup> from the date of purchase as shown on your original invoice.

In case of any defect of your cellphone which prevents you from normal use thereof, you must immediately inform your vendor and present your cellphone with your proof of purchase.

If the defect is confirmed, your cellphone or part thereof will be either replaced or repaired, as appropriate. Repaired Cellphone and accessories are entitled to a one (1) month warranty for the same defect. Repair or replacement may be carried out using reconditioned components offering equivalent functionality.

This warranty covers the cost of parts and labor but excludes any other costs.

<sup>(1)</sup> The warranty period may vary depending on your country.

<sup>(2)</sup> The life of a rechargeable cellphone battery in terms of conversation time standby time, and total service life, will depend on the conditions of use and network configuration. Batteries being considered expendable supplies, the specifications state that you should obtain optimal performance for your cellphone during the first six months after purchase and for approximately 200 more recharges.

This warranty shall not apply to defects to your cellphone and/or accessory due to (without any limitation):

- 1) Non-compliance with the instructions for use or installation, or with technical and safety standards applicable in the geographical area where your cellphone is used,
- 2) Connection to any equipment not supplied or not recommended by TCT Mobile Limited,
- 3) Modification or repair performed by individuals not authorized by TCT Mobile Limited or its affiliates or your vendor,
- 4) Inclement weather, lightning, fire, humidity, infiltration of liquids or foods, chemical products, download of files, crash, high voltage, corrosion, oxidation...

Your cellphone will not be repaired in case labels or serial numbers (IMEI) have been removed or altered.

There are no express warranties, whether written, oral or implied, other than this printed limited warranty or the mandatory warranty provided by your jurisdiction.

In no event shall TCT Mobile Limited or any of its affiliates be liable for incidental or consequential damages of any nature whatsoever, including but not limited commercial loss, to the full extent those damages can be disclaimed by law.

Some countries/states do not allow the exclusion or limitation of incidental or consequential damages, or limitation of the duration of implied warranties, so the preceding limitations or exclusions may not apply to you.



## 22 Accessories <sup>(1)</sup> .....

 
The latest generation of Alcatel GSM cellphones offers a built-in handsfree feature that allows you to use the cellphone from a distance, placed on a table for example. For those who prefer to keep their conversations confidential, an earpiece is also available known as the headset.



Standard charger



UK charger



Battery



USB cable



Stereo headset




Only use your cellphone with Alcatel batteries, chargers and accessories in your box.

<sup>(1)</sup> Pictures for reference only.


## 23 Troubleshooting .....

Before contacting the aftersales department, you are advised to follow the instructions below:


- You are advised to switch off the cellphone from time to time to optimize its performance.
- You are advised to fully charge (  ) the battery for optimal operation.
- Avoid storing large amounts of data in your cellphone as this may affect the performance of your cellphone.

and carry out the following checks:

### **My cellphone will not switch on**

- Press  until the screen comes on
- Check the battery charge level
- Check the battery contacts, remove and reinstall your battery, then turn your cellphone back on

### **My cellphone has not responded for several minutes**

- Press the  key
- Remove the battery and re-insert it, then switch the cellphone back on

### **My screen is difficult to read**

- Clean your screen
- Use your cellphone in accordance with the recommended conditions of use

### **My cellphone turns off by itself**

- Check that your keypad is locked when you are not using your cellphone
- Check the battery charge level

### **My cellphone will not charge properly**

- Make sure that your battery is not completely discharged; the battery charge indicator can take several minutes and may be accompanied by a quiet whistling sound
- Make sure charging is carried out under normal conditions (0°C - +40°C)
- Make sure your battery is inserted. It must be inserted before plugging in the charger



- Make sure you are using an Alcatel battery and charger
- When abroad, check that the electrical current is compatible


#### **My cellphone will not connect to a network**

- Try connecting in another location
- Verify the network coverage with your operator
- Check with your operator that your SIM card is valid
- Try selecting the available network(s) manually (see page 79)
- Try connecting at a later time if the network is overloaded

#### **SIM card error**

- Make sure the SIM card has been correctly inserted (see page 13)
- Verify with your operator that your SIM card is 3V compatible; the old 5V SIM cards cannot be used
- Make sure the chip on your SIM card is not damaged or scratched

#### **Unable to make outgoing calls**

- Make sure you have dialled a valid number and press the  key
- For international calls, check the country and area codes
- Make sure your cellphone is connected to a network, and that the network is not overloaded or unavailable
- Check your subscription status with your operator (credit, SIM card valid, etc.)
- Make sure you have not barred outgoing calls (see page 44)


#### **Unable to receive incoming calls**

- Make sure your cellphone is switched on and connected to a network (check for overloaded or unavailable network)
- Check your subscription status with your operator (credit, SIM card valid, etc.)
- Make sure you have not forwarded incoming calls (see page 44)
- Make sure that you have not barred certain calls

#### **The caller's name does not appear when a call is received**

- Check that you have subscribed to this service with your operator
- Your caller has concealed his/her number

#### **The sound quality of the calls is not optimal**

- You can adjust the volume during a call by means of the Volume key
- Check the radio reception icon level 

#### **I am unable to use the features described in the manual**

- Check with your operator to make sure that your subscription includes this service
- Make sure this feature does not require an Alcatel accessory

#### **When I select a number from my directory, the number is not dialled**

- Make sure that you have correctly recorded the number in your file
- Make sure that you have selected the country prefix when calling a foreign country

#### **I am unable to add a contact in my directory**

- Make sure that your SIM card directory is not full; delete some contacts or save the contacts in the product directory (i.e. your professional or personal directories)

#### **My callers are unable to leave messages on my voicemail**

- Contact your network operator to check service availability

#### **I cannot access my voicemail**

- Make sure your operator's voicemail number is correctly entered in "My numbers"
- Try later if the network is busy

#### **I am unable to send and receive MMS**

- Check your cellphone memory available as it might be full
- Contact your network operator to check service availability and check MMS parameters (see page 32)
- Verify the server center number or your MMS profile with your operator
- The server center may be swamped; try again later

#### **The icon is displayed on my standby screen**

- You have saved too many short messages on your SIM card; delete some of them or archive them in the product memory

#### **"No service" is displayed**

- You are outside of the network coverage area

#### **I have already entered 3 incorrect PIN codes**

- Contact your network operator to obtain the PUK code (Personal Unblocking Key)



### **I am unable to connect my cellphone to my computer**

- Install first of all Alcatel's PC suite
- Use "Install the connection" and perform the installation
- Check that your computer meets the requirements for Alcatel's PC Suite installation

### **I am unable to download new files**

- Check for free space
- Delete some files
- Select the MicroSD Card to store the files you downloaded
- Check your subscription status with your operator

### **The cellphone can't be detected by others via Bluetooth**

- Make sure that Bluetooth is turned on and your cellphone is visible to other users (see page 69)

### **My cellphone is dead, can't power on**

- Make sure your battery is not completely used up or damaged.
- Remove your battery, remove your SIM card then power it on again.
- Hold down # + power on/off key at same time to reset it.



ALL User cellphone data: contacts, photos, messages and files, downloaded applications like Java games will be lost permanently.

### **How to make your battery last longer**

- Make sure you followed the complete charge time (minimum 3 hours)
- After a partial charge, the battery level indicator may not be exact. Wait for at least 20 minutes after removing the charger to obtain an exact indication
- Switch on the backlight upon request.
- Extend email auto-check interval as long as possible.
- Update news, weather info. upon demand manually or set its auto-check interval longer.
- Exit Java background-running applications if they are not being used for a long time.
- Deactivate Bluetooth when not in use.

ALCATEL is a trademark of Alcatel-Lucent  
and is used under license by  
TCT Mobile Limited.

All rights reserved © Copyright 2010  
TCT Mobile Limited.

TCT Mobile Limited reserves  
the right to alter material or technical  
specification without prior notice.